



1: Remove cover from housing unit. Remove and discard dirty filters. (do not discard cover or screws.)

2: Filters and cover assembly.

Slide tongue on top of filter into groove on bottom of 2nd filter, then slide tongue on cover into groove on bottom of filter as shown.

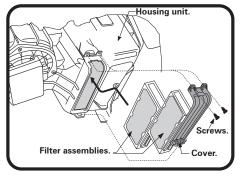

- 3: Install the filter assembly-cover in the housing unit
- a: Tilt the filter cover assembly.
- b: Insert the front half of top filter into housing unit
- c: Push assembly up and into the housing unit while sliding them together.

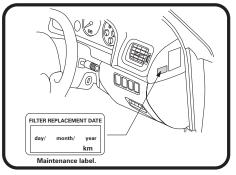

4: Fill in the maintenance label and stick to right hand end of dashboard as shown

GUD Automotive Pty Ltd 245 Sunshine Road Tottenham Victoria 3012 Australia. www.rycofilters.com.au GUD (NZ) Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz