



- 1: Drain fuel from filter. ⑤
- 2: Disconnect electrical line from water sensor. ⑥
- 3: Undo and remove retaining nut. ①
- 4: Using a twisting motion remove used filter from housing.
- 5: Apply lubricant to "O" ring ② and gasket. ③
- 6: Remove and replace "O" ring ④ on centre stem. Lubricate new "O" ring before fitting.
- 7: Fit new filter into filter bowl.
- 8: Fit filter bowl to filter head making sure that arrow on bowl is in line with front centre of filter head.
- 9: Reconnect electrical line to water sensor ⑥ .
- 10: Prime fuel system, start engine and check for leaks, If leaking shut engine down and fix leaking problem.



AUSTRALIA

GUD Automotive Pty Ltd
29 Taras Avenue, Altona North
Victoria 3025 Australia.
www.rycofilters.com.au

NEW ZEALAND

GUD Automotive - A division of GUD (NZ) Holdings Limited
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz

SOCIAL NETWORKS

Facebook: <http://facebook.com/rycofilters>
YouTube: <http://youtube.com/rycofilters1>
Twitter: http://twitter.com/Ryco_Filters