





FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA109P. HOLDEN ZAFIRA


(FILTER LOCATED BEHIND GLOVE BOX))

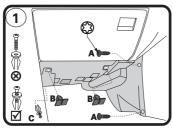


1: Remove 2 screws (A) using special tool, remove 2 clips (B), remove toggle bolt (C) then remove cover.

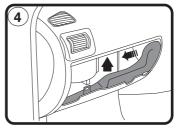


4: Pull cover to left and then lift out.

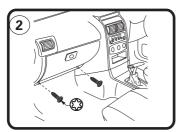

2: Remove 2 screws from bottom of glove box using special tool.

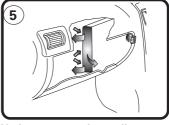

 Undo screw or release clips, open housing and remove used filter, note flow direction, fit new RYCO filter refit all previously removed parts.

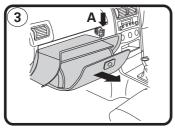

3: Disconnect electrical connection "A" then remove glove box.

6: Dispose of used filter correctly.

GUD Automotive Pty Ltd 245 Sunshine Road Tottenham Victoria 3012 Australia. www.rycofilters.com.au GUD (NZ) Ltd 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz