

# RYCO FILTERS




## FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA238P

RCA238C contains two cabin filter.  
To install the cabin filters into  
the filter housing it would need plastic joiner  
that comes with original filters.




Plastic joiner-not included in  
RCA238P filter set.


1. Open the cover underneath of the glove box at the passenger side to locate the cabin filter housing.
2. Open the plastic cover of the filter housing by squeezing the clip on one side.
3. Remove old filters by dragging their flaps. Clean the plastic joiner.

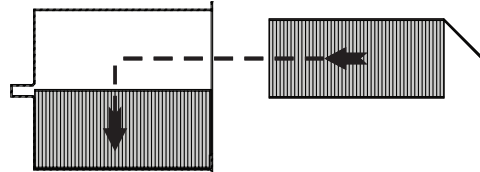


4. Push first cabin filter into the filter housing, then press downwards.

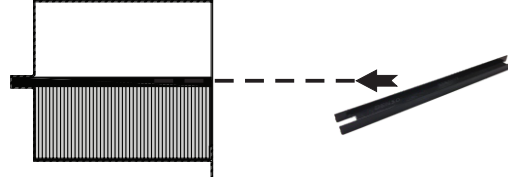

5. Place plastic joiner on top the first cabin filter, push through to the end.

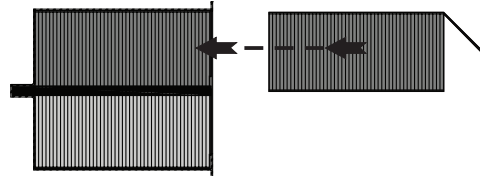

5. Place second cabin filter on the plastic joiner, insert into the filter housing.

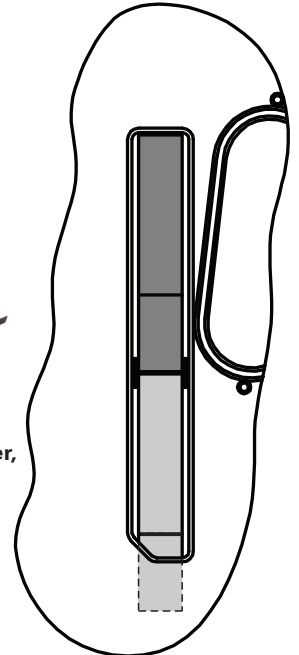

FRONT VIEW

GUD Automotive Pty Ltd  
29 Taras Avenue Altona North  
Victoria 3025 Australia.  
[www.rycofilters.com.au](http://www.rycofilters.com.au)

GUD (NZ) Ltd  
626A Rosebank Rd. Avondale  
Auckland New Zealand  
[www.ryco.co.nz](http://www.ryco.co.nz)