


RYCO FILTERS



FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA257P. FIAT FREEMONT

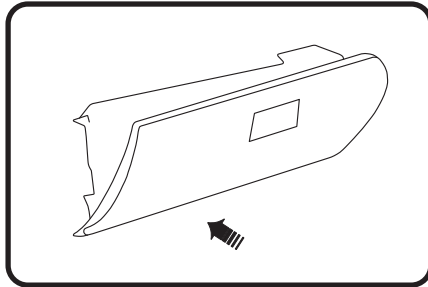

1. The cabin air filter is located behind the glove box compartment unit.
2. Open the glove box and press both top corners inwards to bypass the retaining lugs allowing the lid to drop completely.
3. Remove the cabin air filter housing lid by unclipping it and slide out the old cabin air filter carefully to avoid any accumulated debris from being spread around.
4. Slide the new filter in making sure it is facing to the right air flow direction and refit all components in reverse order.

GUD Automotive Pty Ltd
29 Taras Ave Altona North
Victoria 3025 Australia.
www.rycofilters.com.au

GUD Automotive -
A division of GUD (NZ) Holdings Limited
626A Rosebank Road Avondale
Auckland, New Zealand
www.ryco.co.nz